Linksys PAP2-NA Phone Adapter Configuration Instructions



A. Physical connection

1. Connect the Phone Adapter as illustrated





- 1 -



B. Enter the Configuration Menu

- Look for IP Address of the phone adapter Pick up the phone and type * * * * (star key x 4) Type 110# The IP address would be read out
- 2. Type the IP address onto the address bar of Internet Explorer
- 3. Click "Admin Login" as illustrated

Edit View Fa	vorites Tools He	elo					
0.0							
			ow list 🖬 🖬				-
55 🛃				Go Links **			
	NKSVS						
A Divisi	on of Cisco Systems, Inc					Ferrician Version 2 1 20151	
			Phone Adapter with	er-IP	PAP2		
	Voice						
		Info System Us	ser 1 User 2				
			Basic View (swit	ch to advanced view)		Admin Logn	
		-					
Sy	stem Information						
		DHCP: Host Nate	Enabled and bised bill com	Current IP:	192.168.0.87		
		Current Netmask:	255,255,255.0	Current Gateway:	192,168.0.1		
		Primary DNS:	139.130.4.4				
		Secondary DNS:	192.231.203.132				
Pro	duct Information						
		Product Name:	PAP2-NA	Serial Number:	FH900E041919		
		Software Version	3.1.3(LS)	Hardware Version:	0.03.4		
		MAC Address:	0014EF4CADCE	Client Certificate:	installed		
_		Customization	Not Customized				
	System Status						
		Current Time:	5/8/2006 03:00:20	Elepsed Time:	00:07:19		
		Broadcast Pits Sent	0	Broadcast Bytes Sen	£0		
		Broadcast Pits Recv.	2148	Broadcast Bytes Beck	277959		
		Broadcast Pits		Broadcast Bytes			
		Dropped	0	Dropped:	0		
		RTP Packets Sent:	642	RTP Bytes Sent:	19260		
		RTP Packets Recv.	622	RTP Bytes Recv.	18640		
		SP Messages Sent	14	SP Bytes Sent:	8316		
		Edental P.	10	SP Byses Necv.	0002		
	Line 1 Status	Contraction (C)					
	Cille 1 Scalus	Distant Marcal		Harry Pr.	1117700		
		and the second sec					





C. System Settings

1. Click on "System" Tab and enter the information as illustrated. Click "Save Settings" when done.



D. SIP Settings

1. Click on "SIP" Tab and enter the information as illustrated. Click "Save Settings" when done.

		PAP2			
oice	info System	Regional Line 1	Line 2 User 1 User	2	
	and the second second	Basic View (avri	ch to advanced view)		<u>UserLog</u>
onse Status Co	de sin 1	hhodobal.com/519	0		
100.5	SITI RSC	clobal.com:5190	ST2RSC:		
	SIT3 PSC		SIT4 MSC:		
P Paramete	irs.				
	RTP Port Min	16384	RTP Port Max:	15482	
Payload Typ	es				
	NSE Dynanic Payload	100	AVT Dynamic Payload	101	
	Payload	98	Payload:	97	
	0726r40 Dynamic	96	0729b Dynamic Deuteeni	99	

- 3 -



E. Configure Line 1 or 2

1. Click on "Line 1" Tab and enter the information as illustrated. Click "Save Settings" when done.



